

## STATE OF OKLAHOMA BOARD OF TESTS FOR ALCOHOL AND DRUG INFLUENCE

Dr. Jarrad Wagner, Ph.D. F-ABFT Chairman

Post Office Box 36307 Oklahoma City, Oklahoma 73136-2307 Phone: (405) 425-2460 Fax: (405) 425-2490 www.bot.ok.gov

Joshua Smith Director

#### **ATTESTATION**

I, the undersigned <u>Joshua Smith</u> (Director/Records Custodian), attest under oath pursuant to 12 O.S. §2902 (11)(a) this record was made, at or near the time of the occurrence of the matters set forth by or from information transmitted by a person having knowledge of those matters; was kept in the course of the regularly conducted business activity of the Board; and was made pursuant to the regularly conducted activity. The duplicate record provided is listed below:

1) The attached "Service Overview" is a true and accurate copy of maintenance performed on the Intoxilyzer 8000, serial number 80-003317, in compliance with the agency's Maintenance Policy and Procedures.

This packet consists of 13 pages.

Name of Position: Director/Records Custodian

Date of Attestation: 05/18/2022

## Service Overview



3600 N. Martin Luther King Bldg #9 Oklahoma City, OK 73111 405-425-2460

BENCH CHECK DATE: 09-26-2019

**SERIAL:** 80-003317

#### **DOCUMENTATION WITHIN SERVICE PACKET:**

- BOT Certificate of Calibration and Operation
- Bench Check
- Bench Check Technician's Report
- BOT Dry Gas Certificate of Analysis
- Mock Subject Test
- BOT Certificates of Analysis on Certified Solutions (4)



## STATE OF OKLAHOMA BOARD OF TESTS FOR ALCOHOL AND DRUG INFLUENCE

Administrative Office at:
Board of Tests for Alcohol and Drug Influence
Post Office Box 36307
Oklahoma City, Oklahoma 73136-2307

## Certificate of Calibration and Operation

This is to certify that the calibration of INTOXILYZER 8000, serial number 80-003317, manufactured by CMI Inc., a subsidiary of MPD, Inc. of Owensboro, Kentucky, was tested and found to be in compliance with National Highway Traffic Safety Administration Standard for Devices to Measure Breath Alcohol (F.R., No. 179 48705-48710) Sept. 17, 1993) and with International Recommendation OIML R 126 Edition 1998 (E). Calibration solutions are traceable to NIST standard material 1828.

In addition the operational procedures and functions of this Intoxilyzer have also been tested and found to be in compliance with the Oklahoma Board of Tests for Alcohol and Drug Influence - Rules and Regulations OAC Title 40: 25-1-2 and 30-1-3 and is hereby certified for use as an evidential breath testing device within this state.

DATE
07-22-08
09-30-08
03-22-10
03-26-10
12-15-11
05-07-12
12-09-13
12-17-13
11-05-15
09-11-17
09-26-19



Presentation of this form certifies that the Intoxilyzer, SN: 80-003317, functioned properly at the time of the breath test and hereby certifies the breath test result as valid.

Date:

Re: Request for Log of Test on Intoxilyzer 8000

Name:

#### Dear Sir:

The Log of Test information from a breath test conducted on a Intoxilyzer 8000 is printed in Section 2 of the Affidavit and is no longer retained as a separate form as with the Intoxilyzer 5000. The 8000 uses a nitrogen/ethanol dry gas for the external control test. The dry gas cylinder has the capacity to perform approximately 325 tests and does not require maintenance until its expiration date or can no longer provide the required pressure to perform a control test. The cylinder has an expiration date of two years from date filled at the manufacturer and is programmed in the 8000 upon installation, both dates are printed in Section 2 of the Affidavit. The Intoxilyzer is programmed to disable itself when the date of expiration is reached or the pressure monitor indicates 25 lbs psi.

Due to the reliability and stability of dry gas, maintenance on the 8000 is not required every 30 days or 25 tests, therefore maintenance is no longer performed by officers in the field. The Board of Tests for Alcohol and Drug Influence certifies each Intoxilyzer 8000 for field use by performing a bench check. The bench check is designed to check the operation and procedures programmed in the 8000 to ensure it is functioning properly for use in Oklahoma. A bench check is performed every time a new dry gas cylinder is installed or the instrument has returned from the manufacturer for repair. Once the instrument passes the bench check, all that is required to set it up for field use is to plug it in and turn it on and does not require a permit to set up. The Board of Tests has the ability to monitor each instrument once it is set up in the field.

Each Intoxilyzer has a database of valid permit numbers that it checks prior to allowing a breath test to be performed. The database is updated on a regular basis, if a permit number is invalid that officer will not be able to conduct a breath test on the 8000. If the 8000 prints an affidavit the breath test operator listed in Section 2 had a valid permit at the time of the test and the breath test is valid.

If you have any further questions please feel free to call me.

Sincerely,

J. Robert Blakeburn (OBA11059) State Director of Tests for Alcohol and Drug Influence

O. pohrt Blokelung

# STATE OF OKLAHOMA - BOARD OF TESTS FOR ALCOHOL AND DRUG INFLUENCE

09/26/2019	15:43:4		NSTRUMENT LOCATION 80-00331'	7		
STRUMENT TYPE	INSTRUMENT MODEL INSTRU			STRUMENT SERIAL NUMBER		
Intoxilyzer	I-8000		SULTS	331/		
		IEST KE	.50115			
<b>Diagnost</b> PASS						
Mouth Alcoh	ol Test					
PASS						
RFI Tes	t					
PASS					- Lan	
Abort Te	et	Du	plicate Breath	Sampling Re	esults	
PASS		Value	Test 1	Test 2	Control Test	
Improper Sam PASS		.02	0.018	0.018	0.019	
Interferent Det	ect Test	.04	0.038	0.038	0.039	
PASS		.10	0.096	0.096	0.098	
No Sample Giv		.20	0.200	0.199	0.201	
Insufficient San			PA	SS		
PASS						
Air Blank Contami PASS						
Range Exceed	ed Test					
PASS						
	CE	RTIFYING	rechnician			
	y of perjury that in reg	and the second second second second			and the state of t	
the Intoxliyzer Benc	h Checking Procedure	approved	by the State o	f Oklahoma.		
NATURE				DATE		
				0	9/26/2	
- a					11-	
MATHUL TOGULIA				PERMIT#	01.6027	
TH, JOSHUA	A			0000	016837	

3600 N. Martin Luther King Bldg #9 Oklahoma City, OK 73111 405-425-2460

## **BENCH CHECK TECHNICIAN'S REPORT**

NSTRUMENT toxilyzer Model		Serial #	
000		80-0033	17-
AS CANISTER		00 0000	
OT#		EXP Date	
7919080AZ	#016	08/05	12021
EFERENCE			
	Simulat	tor Model	
Guth 2100	Guth 2100	Guth 2100	Guth 2100
		rial #	
DR3591	DR3753	DR3594	DR3754
00	The second secon	entration	00
.02	.04	10 # TC	.20
18020	17410	18070	17340
7,700	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	tured Date	17010
01-09-2018	12-06-2017	02-26-2018	10-09-2017
		The state of the s	19 99 89 17
	Evnirat	tion Date	
01-09-2020	Expirat 12-06-2019		10-09-2019
01-09-2020	12-06-2019	02-26-2020	10-09-2019
	12-06-2019 Solution Cor	02-26-2020 mmission Date	
01-09-2020	12-06-2019	02-26-2020	10-09-2019
O9-25-19  EASON FOR BE  POST REPAIR    TROUBLESHOO	12-06-2019 <u>Solution Cor</u>	02-26-2020  mmission Date  09-25-19  ACEMENT	
O9-25-19  EASON FOR BE POST REPAIR   TROUBLESHOO	12-06-2019 Solution Cor 09-25-19 ENCH CHECK CYLINDER REPL	02-26-2020  mmission Date  09-25-19  ACEMENT	
09-25-19 EASON FOR BE	12-06-2019 Solution Cor 09-25-19 ENCH CHECK CYLINDER REPL	02-26-2020  mmission Date  09-25-19  ACEMENT	
O9-25-19  EASON FOR BE POST REPAIR   TROUBLESHOO	12-06-2019 Solution Cor 09-25-19 ENCH CHECK CYLINDER REPL	02-26-2020  mmission Date  09-25-19  ACEMENT	
O9-25-19  EASON FOR BE POST REPAIR   TROUBLESHOO	12-06-2019 Solution Cor 09-25-19 ENCH CHECK CYLINDER REPL	02-26-2020  mmission Date  09-25-19  ACEMENT	
O9-25-19  EASON FOR BE POST REPAIR   TROUBLESHOO	12-06-2019 Solution Cor 09-25-19 ENCH CHECK CYLINDER REPL	02-26-2020  mmission Date  09-25-19  ACEMENT	

g/210L

0.000

0.079

0.000

0.080

0.000

0.080

0.000

0.079

0.000

0.080

0.000

0.080

0.000

0.080

0.000

0.079 0.000

0.080

0.000

0.079

0.000

0.0796

0.0005

0.6487

SN 80-002591

07:27

Time

07:27

07:27

07:28

07:28

07:29

07:29

07:30

07:30

07:31

07:31

07:31

07:32

07:32

07:33

07:33

07:33

07:34

07:34

07:35

07:35

07:36

ALPHA INSTRUMENT

Model 8000 09/17/2019

Test

Air Blank

Cal Check

Air Blank

Std Deu

Cal Check Stats Average

Rel Std Deu(%)

Intoxilyzer - Alcohol Analyzer

Certificate o	of Analysis – Dry Gas	100000
09-17-2019	.080	
Date of Analysis	Labelled target value (g/210L)	
# A16	080	
Cylinder #	Average test result	
chan Cmill	N	
BOT Technician Name and Signature		specialty gases

In accordance with BOT Policy and Procedure Statement BRT-2.1.0, Maintenance, the above referenced dry gas cylinder is suitable for use as an external reference with the incoxilyzer 8000x 790 • Jacksonville, IL 62651-0790 217-245-2183 • Fax: 217-243-7634 • www.ilmoproducts.com

## Certificate of Analysis

KECK 2019

Certificate ID:

12204

Part #:

BAC105L080T

Cylinder Size:

105L

Lot Number:

17919080A2

Expiration:

8/5/2021

0.080 BAC (For the calibration of instruments used to determine breath alcohol contentration)

Contents:

105 Liters @ 1000 psig 70°F (21°C)

Analytical

Reported

Accuracy

Analytical

Component:

Concentration:

(U, k=2):

Method:

Ethanol. Nitrogen 208 ppm

+/-0.002 BAC(G/210L) NDIR

[5.2 ppm]

Distributed by:

CMI Inc.

316 East Ninth Stree Owensboro, KY 42: Phone 866-835-0691 www.alcoholtest.com

Operator's Signature

\*Traceable to:

Certified Reference Material - 262.4 µmol/mol

Ethanol in Nitrogen - Serial No. GN0015026 Lot No. 050319E11

Store in dry area, away from sources of heat, ignition and direct sunlight. Do not allow storage area to exceed 52 °C (125 °F).

Specialty Gas Lab Tech

07-15-1

Issuance Date

Accreditation #61895

The calibration results within this certificate were obtained using equipment and standards capable of producing analytical results traceable to NIST, and apply only to the items contained on this certificate. ILMO Products Company makes no warranty or representation as to the suitability of the use of any information provided for any particular purpose. The information use is at the sole discretion and risk of the user. Liability shall be limited to established replacement cost of this material or service.

### 8/13


# OFFICER'S AFFIDAVIT AND NOTICE OF REVOCATION/DISOUALIFICATION

	TCE.	, 00111	1011/101/	QUILLI		1			Section 1
ARREST DATE 09/27/2019		ST TIME 330		COUNTY#	CITY # <b>81</b>	NON			
ARREST LOCATION	1 4 ~			CI	TY	140141	COUNTY		_
NONE SUBJECT NAME		~·			NONE DATE OF BIRTH	SEX		AHOM/ HEIGHT	A Weight
	ECT TEST				08/09/19		W	510	165
ADDRESS 3600 MARTIN	דא משעייווז ו	NC A	CITY CITY	HOMA CIT	v	STATE	Ž	7313	2
DRIVER LICENSE #	HOTTIEK KI	.NO A	OKLIA	EXPIRATION DATE	STATE	CLASS	RESTRICT		DORSEMENTS
T083454871		luonsi		06/30/2		A		IV.	
VEHICLE MAKE MOCK		MOCK			MOCK		OK	N PLA	CARD
On the above date, time, and local highway, street, turnpike, public p	ation, the above named perso	n was arrested, and I	had reasonable groun	ds to believe the person	n was driving or in actual pl	hysical control of	a motor vehic	cle upon a pu	iblic road,
influence of alcohol and/or other i	ntoxicating substances as pro		oau, street, alley or lar	le willcir provides acces	s to one or more single or	multi-lamily dwel	iing within this	state write	under trie
(Describe driving behavior or circu MOCK SUBJECT	*	E MATNTEN	JANCE. NEW	GAS CANTS	STER INSTALL	T.			
						_			
Describe person's condition (odor	, actions, etc.):								
NONE									
		THE BERGON W	AC INFORMED OF TH	IE IMBLIED CONCENT	TEST DEOLIEST				
BREATH-ALCOHOL ANALYSIS	RECORD REPORT OF THE		***************************************	IE IMPLIED CONSENT	-	PD.			Section 2
EQUIPMENT	NESOND, REPORT OF THE	SERIAL N	UMBER S	PECIALIST					Section 2
I-8000		80-			TESTS				
Dry			TARGET VALUE 0.080	P	5837				
MANUFACTURER			LOT#	DATE	CYLINDER INSTALLED		E CYLINDER		
OBSERVATION START TEST	DATE	MOUTHPIECE	179190		9/26/2019		8/05/	2021	
	7/27/2019	G			rivation/observati	i i			
RESULT TABLE			•	s observed prior e time of test ad	to and continuing		T	HE STA	TA
Test	g/210L	Time		e time of test ad	ministration.		19/1	**.	
Air Blank	0.00	14:36	I administer	red said Brea	h-Alcohol Tes	t in			19
Subject Test	0.00	14:38	compliance	e with the api	olicable operati	ng	S * (3)	NA	No.
Breath Volume Air Blank	2.031 LITERS 0.00	14:38			oard of Tests.		[4] * * *)		(***)E
Wait	0.00	14:40	P				13/1/		\*****
Air Blank	0.00	14:40							//
Subject Test Breath Volume	0.00 2.566 LITERS	14:41	SIGNATURE OF C	PERATOR				1907	
Air Blank	0.00	14:42	IAME						
Cal Check Air Blank	0.07 0.00	14:42	SMITH, JC	SHUA				est Resu	
	0.00	11.13	BADGE # 000004	PERM	00016837		BrA	AC g/21	UL
		7	AGENCY	133 00	00010037		0	.00	)
			BOARD OF	TESTS		L			
EFFECTIVE THIRTY (30) DAY days or more, if you refused or (operating a CMV or CDL holde Safety must receive your writter The approved hearing reques Division, Department of Public 3 a fine of not more than Five Huperson's license, permit, or othe SERVING OF NOTICE: ID Date Served: 09/27	failed the state's test(s). In rr) OR a test result of .04 or n request for an administral st form is available at http Safety, P.O. Box 11415, Ol- ndred Dollars (\$500.00), or er evidence of driving privile personally hand-deliv	addition, your coming more while operating the hearing on the sis://www.ok.gov/dp (C, OK 73136. It should be should	mercial driving privile a commercial mot Department approv- os/documents/ReqH all be a misdemeanc nd imprisonment, for of a law enforcement the above containing a commercial missing the above containing a commercial missing a commer	ge in this state will be or vehicle. To appeal de form, within fifteer learing.pdf. Submit y r punishable by impris any person to apply fit officer or the Depart ing the Notice of F	disqualified if you refuse the driver's license revor (15) days from the date our hearing request form comment for not less than or a renewal or a replace ment. Revocation to the per	d or failed the scation/disqualifi you received in in person at 36 seven (7) days ment license to	tate's test(s) cation, the D otice of revoi 600 N. MLK / s nor more the operate a m	epartment ocation or dis Ave. or by men six (6) men si	qualification.  nail to Legal  nonths, or by
						Ba	ıdge #:		
In accordance with Title 1				nder the laws of (	klahoma that the fo	regoing is tru	e and cori	ect."	Section 4
Date: 09/27/201	9 Place (location wh	nen signed):			gnature of arresting	officer:			
SMITH, JOS	HUA			BOARD O	F TESTS				
BADGE	AGENCY ADDRESS	ATCAST			ZIP CODE	PHONE	4050		
0000000435	INTER-AGEI	NCY			00000	"405	42524	160"	
OTHER WITNESSES:			Terrer to	f					Section 5
NAME 1			TITLE	ADDRESS		PHONE			
NAME			TITLE	ADDRESS		PHONE			
2			1	I		1			1

## 9/13

# OFFICER'S AFFIDAVIT AND NOTICE OF REVOCATION/DISOUALIFICATION

	R	EVUCA:	HON/DI	<b>SQUAI</b>	JIFJ	ICATIC	I				Section
ARREST DATE 09/27/2019		RREST TIME		COUNTY #		CITY # <b>81</b>		ATION#			Section
ARREST LOCATION		T220		55	CITY			IONE	COUNT		
NONE SUBJECT NAME					NO]	VE TE OF BIRTH		SEX	OK	LAHON HEIGHT	<b>/IA</b>  WEIGHT
MOCK, SUBJE	ECT TEST				Ô	8/09/19	61	M	W	510	165
ADDRESS 3600 MARTIN	I LUTHER	KING A	CITY	HOMA CI	тv		STA	ATE OK		ZIP CODE	
DRIVER LICENSE #	L LOTTILIC .	KINO A	ORDA	EXPIRATION DAT	ΓE	STATE	CLASS	710	RESTRI		NDORSEMENTS
T083454871 VEHICLE MAKE		MODEL		06/30/	201	9 OK TAG#	_A	let	ATE		M
MOCK		MOCK	• •			MOCK			ÒΚ	1	N
On the above date, time, and loca highway, street, turnpike, public p influence of alcohol and/or other i (Describe driving behavior or circu MOCK SUBJECT	arking lot, or other public ntoxicating substances a umstances):	place, or upon a privat s prohibited by law.	e road, street, alley or lar	ne which provides a	ccess to o	ne or more single or	multi-fam	ontrol of a nily dwelli	a motor ve ng within t	hicle upon a this state whi	public road, le under the
Describe person's condition (odor	, actions, etc.):										
NONE											
			WAS INFORMED OF TH								
BREATH-ALCOHOL ANALYSIS EQUIPMENT	RECORD, REPORT OF			and LOG OF TES	F AND MA	INTENANCE RECO	RD.				Section 2
I-8000					F T	ESTS					
STANDARD			TARGET VALUE		ERMIT N						
Dry MANUFACTURER			0.080		1683 ATE CYL	NDER INSTALLED		IDATE	CYLINDE	R EXPIRES	
ILMO			179190			26/2019				/202	
OBSERVATION START TEST 1400 09	DATE 9/27/2019	MOUTHPIECE G	A 15-minute	(or greater)	depriva	tion/observati	on				
RESULT TABLE	72772013			•		ind continuing				THE ST	A
Test	g/210L	Time	to th	e time of test	admin	istration.			OF/	***^*	
Aim Dlank	0.00	14.26	I administer	red said Rr	eath_/	Micohal Tes	t in		# X		
Air Blank Subject Test	0.00 0.00	14:36 14:38						1	81.0	000	A RELIEF
Breath Volume	2.031 LITERS		_			able operati	пg	[	티차	N. III.	* * * *   <b>*</b>
Air Blank Wait	0.00	14:38 14:40	procec	lure of the	Boarc	i or rests.		1	E **		*:
Air Blank	0.00	14:40							Polis	****	
Subject Test	0.00	14:41	SIGNATURE OF (	PERATOR						1907	
Breath Volume Air Blank	2.566 LITERS 0.00	14:42									
Cal Check	0.07	14:42	NAME CMTTHI TO	CIIIIA	-			] <b>Г</b>	7	Γest Res	sult
Air Blank	0.00	14:43	BADGE #	l'	ERMIT#			<b>│                                    </b>		rAC g/2	
			00000004	135	0000	0016837			(	0.0	0
			BOARD OF	TESTS				L		<del></del>	<u> </u>
EFFECTIVE THIRTY (30) DAY days or more, if you refused or operating a CMV or CDL holde Safety must receive your writter the approved hearing reques Division, Department of Public 8 in of not more than Five Hulberson's license, permit, or othe	failed the state's test(s) ir) OR a test result of .0 in request for an administ to the state of the state of the safety, P.O. Box 11415 indred Dollars (\$500.00	. In addition, your co 4 or more while opera strative hearing on th https://www.ok.gov/ , OKC, OK 73136. It , or by both such fine	ation is given that your mmercial driving privile iting a commercial mot e Department approv dps/documents/ReqH shall be a misdemeanc and imprisonment, for	driver's license is ge in this state will or vehicle. To apped form, within fift learing.pdf. Subnor punishable by imany person to app	be disque beal the deen (15) hit your his prisonme bly for a re	alified if you refuse river's license revoo days from the date earing request form ent for not less than enewal or a replace	d or faile cation/di you rece i in perse seven (	ed the standification eived no on at 360 (7) days	ate's test( ation, the tice of rev 00 N. MLH nor more	(s) Departmen vocation or o K Ave. or by than six (6)	disqualification.  mail to Legal  months, or by
SERVING OF NOTICE: I		-	•	· ·				amad i	Coatio	n 1 abaua	
Date served: 09/27										n i above	€.
									dge #:		G .:
n accordance with Title 1. Date: $09/27/201$				nder the laws o		oma that the for ure of arresting		-	e and co	orrect."	Section 4
NAME JOS				AGENCY BOARD		rests					
BADGE	AGENCY ADDRESS			POLITO	OI.	ZIP CODE	PHO				
0000000435	INTER-AG	ENCY				00000			4252	460"	

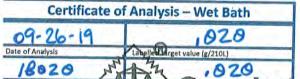

A LABORATORIES, INC

BRT Form 6.0

In accordance with BRT – 2.1.0, Maintenance, the above referenced simulator solution is suitable for use as an external reference in maintenance of the intoxilyzer 8000.

CERTIFICATE

OF ANALYSIS

RECVIDENDIA

ILPHA INSTRUMENT 2

ntoxilyzer - Alcohol Analyzer

**BOT Technician Name and Signature** 

lodel 8000

Air Blank Cal Check

Air Blank

Cal Check

Air Blank

Average

Std Dev
Rel Std Dev(%)

Cal Check Stats

Lot Number

SN 80-004923

14:11

14:12

14:12 14:13

14:14

14:01

ed Alcohol Reference Solution for Simulator

**Test** g/210L Time air Blank 0.000 14:01 14:02 Cal Check 0.020 14:02 0.000 air Blank 14:03 Cal Check 0.020 0.000 14:04 Air Blank 14:04 Cal Check 0.020 Air Blank 0.000 14:05 Cal Check 0.020 14:06 0.000 14:05 Air Blank 0.021 14:07 Cal Check 0.000 14:07 Air Blank 0.020 14:08 Cal Check Air Blank 0.000 14:09 0.020 14:09 Cal Check 0.000 14:10 Air Blank Cal Check 0.020 14:11

0.000

0.020

0.000

0.020

0.000

0.0201

0.0003

1.5731

Random Samples of Lot Number 18020 of

Reference Solution for Simulator were analyzed by

romatography on January 11, 2018, using a Perkin Elmer Gas

lograph Autosystem XL S/N: 610N9030209, and found to contain

(w/vol) ethyl alcohol. The expiration date for this lot

is January 9, 2020 at 11:59 PM.

When used in a calibrated Simulator, operating at +/- .2°C, this solution will give a breath alcohol instrument reading of 0.020 g/210L +/- 3%.

he alcohol and water used in this solution were test interfering substances.


Operator's Signature

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN08031603 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

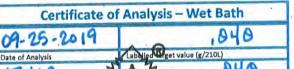



GUTH LABORATORIES, INC.

590 NORTH 67th STREET

HARRISBURG, PA 17111-4511
 TELEPHONE: 717-564-5470

BOT Technician Name and Signature

BRT Form 6.0

In accordance with BRT — 2.1.0, Maintenance, the above referenced simulator solution is suitable for use as an external reference in maintenance of the Intoxilyzer 8000.

#### CERTIFICATE OF ANALYSIS

ALPHA INSTRUMENT

Intoxilyzer - Alcohol Analyzer

Model 8000

SN 80-002591

09/25/2019

12:08

ed Alcohol Reference Solution for Simulator

Test	g/210L	Time
Air Blank	0.000	12:09
Cal Check	0.039	12:10
Air Blank	0.000	12:10
Cal Check	0.040	12:11
Air Blank	0.000	12:11
Cal Check	0.040	12:12
Air Blank	0.000	12:13
Cal Check	0.041	12:13
Air Blank	0.000	12:14
.Cal Check	0.040	12:15
Air Blank	0.000	12:15
Cal Check	0.040	12:16
Air Blank	0.000	12:16
Cal Check	0.040	12:17
Air Blank	0.000	12:18
Cal Check	0.040	12:18
Air Blank	0.000	12:19
Cal Check	0.040	12:20
Air Blank	0.000	12:20
Cal Check	0.039	12:21
Air Blank	0.000	12:21
Cal Check Stats		
Average	0.0399	
Std Dev	0.0005	
Carlo de la carlo		

Random Samples of Lot Number 17410 of

Reference Solution for Simulator were analyzed by
hromatography on December 7, 2017, using a Perkin Elmer Gas
tograph Autosystem XL S/N: 610N9030209, and found to contain
(w/vol) ethyl alcohol. The expiration date for this lot
is December 6, 2019 at 11:59 PM.

When used in a calibrated Simulator, operating at +/- .2°C, this solution will give a breath alcohol s instrument reading of 0.040 g/210L +/- 3%.

the alcohol and water used in this solution were test interfering substances.

Operator's Signature

Rel Std Dev(%) 1.4226

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN12181501 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

7ECV \$ 2019

09-25-2019

100

Date of Analysis

grget value (g/210L)

18200 Lot Number

HARRISBURG, PA 17111-4511
 TELEPHONE: 717-564-5470

In accordance with BRT - 2.1.0, Maintenance, the above referenced simulator solution is suitable for use as an external reference in maintenance of the Intoxilyzer 8000.

CERTIFICATE OF ANALYSIS

ALPHA INSTRUMENT

Cal Check

Air Blank

Average

Std Deu

Cal Check Stats

Rel Std Deu(%) 0.4085

Intoxilyzer - Alcohol Analyzer

Model 8000 SN 80-002591

09/25/2019 12:23

Test	g/210L	Time
Air Blank	0.000	12:24
Cal Check	0.103	12:24
Air Blank	0.000	12:25
Cal Check	0.104	12:26
Air Blank	0.000	12:26
Cal Check	0.103	12:27
Air Blank	0.000	12:28
Cal Check	0.104	12:28
Air-Blank	0.000	12:29
Cal Check	0.103	12:30
Air Blank	0.000	12:30
Cal Check	0.103	12:31
Air Blank	0.000	12:31
Cal Check	0.103	12:32
Air Blank	0.000	12:33
Cal Check	0.103	12:33
Air Blank	0.000	12:34
Cal Check	0.103	12:35
Air Blank	0.000	12:35

0.103

0.000

0.1032

0.0004

12:36 12:36 d Alcohol Reference Solution for Simulator

landom Samples of Lot Number 18200 Reference Solution for Simulator were analyzed by bmatography on July 6, 2018, using a Perkin Elmer Gas Chromatograph tem XL S/N: 610N9030209, and found to contain 0.1215% (w/vol) cohol. The expiration date for this lot is July 3, 2020 at 11:59 PM.

When used in a calibrated Simulator, operating at +/- .2°C, this solution will give a breath alcohol s instrument reading of 0.100 g/210L +/- 3%.

he alcohol and water used in this solution were test interfering substances.

Operator's Signature

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN04271602 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

Certificate of	of Analysis – Wet Bath
09-25-2019	,200
Date of Analysis	Labelled target value (g/210L)
18300 4	(R) . 203
Lot Number	Average test result (g/210L)



BOT Technician Name and Signature

ARRISBURG, PA 17111-4511 • TELEPHONE: 717-564-5470

In accordance with BRT - 2.1.0, Maintenance, the above referenced simulator solution is suitable for use as an external reference in maintenance of the intoxilyzer 8000.

### CERTIFICATE OF ANALYSIS

ALPHA INSTRUMENT

Intoxilyzer - Alcohol Analyzer

Model 8000 SN 80-002591 09/25/2019 13:22

ied Alcohol Reference Solution for Simulator

g/210L Test Time Air Blank 0.000 13:23 Cal Check 0.202 13:24 13:24 Air Blank 0.000 Cal Check 0.203 13:25 Air Blank 0.000 13:25 Cal Check 0.203 13:26 13:27 Air Blank 0.000 Cal Check 0.203 13:27 Air Blank 0.000 13:28 0.203 13:29 Cal Check 13:29 Air Blank 0.000 13:30 Cal Check 0.203 0.000 13:31 Air Blank 0.203 13:31 Cal Check 0.000 13:32 Air Blank 13:33 0.203 Cal Check 13:33 Air Blank 0.000 13:34 0.203 Cal Check 13:34 Air Blank 0.000 Cal Check 0.203 13:35 0.000 13:36 Air Blank Cal Check Stats 0.2029 Average

Random Samples of Lot Number 18300 ol Reference Solution for Simulator were analyzed by thromatography on September 21, 2018, using a Perkin Elmer Gas atograph Autosystem XL S/N: 610N9030209, and found to contain (w/vol) ethyl alcohol. The expiration date for this lot r is September 19, 2020 at 11:59 PM.

When used in a calibrated Simulator, operating at +/- .2°C, this solution will give a breath alcohol is instrument reading of 0.200 g/210 L +/- 3%.

The alcohol and water used in this solution were f test interfering substances.

Operator's Signatur

0.0003 0.1558

Std Deu

Rel Std Dev(%)

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN08101505 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.