

# STATE OF OKLAHOMA BOARD OF TESTS FOR ALCOHOL AND DRUG INFLUENCE

Dr. Jarrad Wagner, Ph.D. F-ABFT Chairman

Post Office Box 36307 Oklahoma City, Oklahoma 73136-2307 Phone: (405) 425-2460 Fax: (405) 425-2490 www.bot.ok.gov

Joshua Smith Director

#### **ATTESTATION**

I, the undersigned <u>Joshua Smith</u> (Director/Records Custodian), attest under oath pursuant to 12 O.S. §2902 (11)(a) this record was made, at or near the time of the occurrence of the matters set forth by or from information transmitted by a person having knowledge of those matters; was kept in the course of the regularly conducted business activity of the Board; and was made pursuant to the regularly conducted activity. The duplicate record provided is listed below:

1) The attached "Service Overview" is a true and accurate copy of maintenance performed on the Intoxilyzer 8000, serial number 80-006145, in compliance with the agency's Maintenance Policy and Procedures.

This packet consists of 13 pages.

signed \_\_\_\_

Name of Position: Director/Records Custodian

Date of Attestation: 05/25/2022

# Service Overview



3600 N. Martin Luther King Bldg #9 Oklahoma City, OK 73111 405-425-2460

**BENCH CHECK DATE**: <u>12-19-2019</u>

**SERIAL:** <u>80-006145</u>

#### **DOCUMENTATION WITHIN SERVICE PACKET:**

- BOT Certificate of Calibration and Operation
- Bench Check
- Bench Check Technician's Report
- BOT Dry Gas Certificate of Analysis
- Mock Subject Test
- BOT Certificates of Analysis on Certified Solutions (4)



# STATE OF OKLAHOMA BOARD OF TESTS FOR ALCOHOL AND DRUG INFLUENCE

Administrative Office at:
Board of Tests for Alcohol and Drug Influence
Post Office Box 36307
Oklahoma City, Oklahoma 73136-2307

# Certificate of Calibration and Operation

This is to certify that the calibration of INTOXILYZER 8000, serial number 80-006145, manufactured by CMI Inc., a subsidiary of MPD, Inc. of Owensboro, Kentucky, was tested and found to be in compliance with National Highway Traffic Safety Administration Standard for Devices to Measure Breath Alcohol (F.R., No. 179 48705-48710) Sept. 17, 1993) and with International Recommendation OIML R 126 Edition 1998 (E). Calibration solutions are traceable to NIST standard material 1828.

In addition the operational procedures and functions of this Intoxilyzer have also been tested and found to be in compliance with the Oklahoma Board of Tests for Alcohol and Drug Influence - Rules and Regulations OAC Title 40: 25-1-2 and 30-1-3 and is hereby certified for use as an evidential breath testing device within this state.

CERTIFICATION TYPE	DATE
Manufacturer Calibration	12-30-13
Board of Tests Bench Check	01-30-14
Manufacturer Calibration	04-28-14
Board of Tests Bench Check	05-06-14
Board of Tests Bench Check	10-14-14
Manufacturer Calibration	07-31-15
Board of Tests Bench Check	08-07-15
Manufacturer Calibration	02-03-16
Board of Tests Bench Check	02-16-16
Board of Tests Bench Check	11-22-17
Board of Tests Bench Check	12-19-19



Presentation of this form certifies that the Intoxilyzer, SN: 80-006145, functioned properly at the time of the breath test and hereby certifies the breath test result as valid.

Date:

Re: Request for Log of Test on Intoxilyzer 8000

Name:

#### Dear Sir:

The Log of Test information from a breath test conducted on a Intoxilyzer 8000 is printed in Section 2 of the Affidavit and is no longer retained as a separate form as with the Intoxilyzer 5000. The 8000 uses a nitrogen/ethanol dry gas for the external control test. The dry gas cylinder has the capacity to perform approximately 325 tests and does not require maintenance until its expiration date or can no longer provide the required pressure to perform a control test. The cylinder has an expiration date of two years from date filled at the manufacturer and is programmed in the 8000 upon installation, both dates are printed in Section 2 of the Affidavit. The Intoxilyzer is programmed to disable itself when the date of expiration is reached or the pressure monitor indicates 25 lbs psi.

Due to the reliability and stability of dry gas, maintenance on the 8000 is not required every 30 days or 25 tests, therefore maintenance is no longer performed by officers in the field. The Board of Tests for Alcohol and Drug Influence certifies each Intoxilyzer 8000 for field use by performing a bench check. The bench check is designed to check the operation and procedures programmed in the 8000 to ensure it is functioning properly for use in Oklahoma. A bench check is performed every time a new dry gas cylinder is installed or the instrument has returned from the manufacturer for repair. Once the instrument passes the bench check, all that is required to set it up for field use is to plug it in and turn it on and does not require a permit to set up. The Board of Tests has the ability to monitor each instrument once it is set up in the field.

Each Intoxilyzer has a database of valid permit numbers that it checks prior to allowing a breath test to be performed. The database is updated on a regular basis, if a permit number is invalid that officer will not be able to conduct a breath test on the 8000. If the 8000 prints an affidavit the breath test operator listed in Section 2 had a valid permit at the time of the test and the breath test is valid.

If you have any further questions please feel free to call me.

Sincerely.

J. Robert Blakeburn (OBA11059) State Director of Tests for Alcohol and Drug Influence

O. pohr &Blokelune

## STATE OF OKLAHOMA - BOARD OF TESTS FOR ALCOHOL AND DRUG INFLUENCE CMI INTOXILYZER BENCH CHECK PROCEDURE REPORT

CH CHECK DATE 2/19/2019	10:16:0	N	NSTRUMENT LOCATION 80-00614	5				
ument type ntoxilyzer	INSTRUMEN			80-00				
	1	TEST RI	ESULTS	00 00	0115			
Diagnostic PASS Mouth Alcohol PASS								
RFI Test PASS		Du	plicate Breath	Sampling Re	sults			
Abort Tes		Value	Test 1	Test 2	Control Test			
Improper Sampl PASS	e Test	,02	0.019	0.018	0.019			
Interferent Detec	ct Test	.04	0.038	0.037	0.039			
No Sample Give	n Test	.10	0.096	0.096	0.097			
PASS		.20	0.199	0.199	0.201			
Insufficient Samp PASS Air Blank Contamin PASS			PA	SS				
Range Exceeded PASS	d Test							
swear under penalty e Intoxliyzer Bench			e above listed i	f Oklahoma.				
URE				DATE 12	19/19			
ITH, JOSHUA				PERMIT #	016837			

3600 N. Martin Luther King Bldg #9 Oklahoma City, OK 73111 405-425-2460

# BENCH CHECK TECHNICIAN'S REPORT

8000 GAS CANISTER		Serial #	e			
GAS CANISTER		80-006145				
LOT#		EXP Date				
28719080 AI	# 995	12-05-3	2021			
REFERENCE	Simulat	tor Model				
Guth 2100	Guth 2100	Guth 2100	Guth 2100			
	<u>Se</u>	rial#				
DR3591	DR3753	DR3594	DR3754			
.02	.04	entration .10	.20			
.02		OT# /	.20			
19050	19080	19301	19200			
	Manufac	tured Date				
02-04-2019	03-04-2019	10-30-2019	08-06-2019			
	Expira	tion Date				
02-04-2021	03-04-2021	10-30-2021	08-06-2021			
	Solution Cor	mmission Date	7.			
12-09-19	12-09-19	12-09-19	12-09-19			
	NCH CHECK CYLINDER REPL ING ROUTINE					
A						

SN 80-004923

15:21

Time

15:22

15:22

15:23

15:23

15:24

15:24

15:24

15:25

15:25

15:26

15:26

15:26

15:27

15:27

15:28

15:28

15:29

15:29

15:30

15:30

15:30

ALPHA INSTRUMENT 2

Model 8000

11/01/2019

Test

Air Blank

Cal Check

Air Blank

Std Deu

Cal Check Stats Average

Rel Std Deu(%)

Intoxilyzer - Alcohol Analyzer

g/210L

0.000

0.080

0.000

0.080

0.000

0.079

0.000

0.080

0.000

0.080

0.000

0.079

0.000

0.080

0.000

0.080

0.000

0.079

0.000

0.080

0.000

0.0797

0.0004

0.6060

nalysis – Dry Gas	Addition to
.080	
lled target value (g/210L)	
.080	The second second second
age test result	
	BRI Form 5.0
	illed target value (g/210L)

7 Eastgate Dr. • P.O. Box 790 • Jacksonville, IL 62651-0790 217-245-2183 • Fax: 217-243-7634 • www.ilmoproducts.com

# Certificate of Analysis

Certificate ID:

12484

Part #:

BAC105L080T

Cylinder Size:

105L

Lot Number: Expiration:

28719080A1

12/5/2021

0.080 BAC (For the calibration of instruments used to determine breath alcohol concentration)

Contents:

105 Liters @ 1000 psig 70°F (21°C)

Analytical

Reported

Accuracy

Analytical

Component:

Concentration:

(U, k=2):

Method:

Ethanol

Mitrogen

208 ppm Balance +/-0.002 BAC(G/210L) NDIR

[5.2 ppm]

Distributed by:

CMI Inc.

316 East Ninth Stri Owensboro, KY 4: Phone 866-835-06

www.alcoholtest.c

Operator's Signature

\*Traceable to:

Certified Reference Material - 262.4 µmol/mol

Ethanol in Nitrogen - Serial No. GN0015026 Lot No. 050319E11

Store in dry area, away from sources of heat, ignition and direct sunlight. Do not allow storage area to exceed 52 °C (125 °F).

Specialty Gas Lab Tech

Issuance Date

Accreditation #61895

The calibration results within this certificate were obtained using equipment and standards capable of producing analytical results traceable to NIST, and apply only to the items contained on this certificate. ILMO Products Company makes no warranty or representation as to the suitability of the use of any information provided for any particular purpose. The information use is at the sole discretion and risk of the user. Liability shall be limited to established replacement cost of this material or service.

### 8/13

# OFFICER'S AFFIDAVIT AND NOTICE OF REVOCATION/DISQUALIFICATION

1	J	


				_						Section 1
ARREST DATE 12/19/2019		ARREST TIME		соинту 55	# CI	TY# 3	CITATION 0922			
ARREST LOCATION MOKC					MOCE		1 3 2 2 2	COUNTY		
SUBJECT NAME				~~~~	DATE	F BIRTH	SEX	RACE	HEIGHT	WEIGHT
NORTH, GAY	LON LEVER	RNE	IOITV		08	/09/19		W	510	165
3600 MARTI	N LUTHER	KING A	OKL	AHOMA (			OK		ZIP CODE <b>731</b> 3	3
DRIVER LICENSE # T083454871				06/30	)/2019	STATE OK	CLASS <b>A</b>	RESTRIC	_ I _	DORSEMENTS
VEHICLE MAKE		MODEL	- FILL CONTROL OF THE STATE OF	100/30	TA	G#	S	TATE	CMV PL	ACARD
<b>N</b> On the above date, time, and k	ocation, the above named	N porson was arrested on	1 I had rassanable are	aunda ta haliaya th		<u> </u>		OK		N
highway, street, turnpike, public influence of alcohol and/or othe (Describe driving behavior or ci	c parking lot, or other publer intoxicating substances ircumstances):	ic place, or upon a private as prohibited by law.	e road, street, alley or	lane which provide	s access to one o	r more single or	multi-family dwel	a motor ver ling within th	nicie upon a p nis state while	e under the
Describe person's condition (oc	dor, actions, etc.):									
NONE										
	10 DE 000D DE 000T 01		VAS INFORMED OF			-				0 0
BREATH-ALCOHOL ANALYS EQUIPMENT	IS RECORD, REPORT OF		IN SECTION 1 ABOV	/E, and LOG OF TI	EST AND MAINT	ENANCE RECO	RD.			Section 2
I-8000			-006145	BOARD	OF TES					
standard Dry			0.080		16837					
MANUFACTURER			LOT#	NATIONAL CONTRACTOR OF THE PARTY OF THE PART	DATE CYLINDI	R INSTALLED			REXPIRES	
ILMO OBSERVATION START TES	ST DATE	MOUTHPIECE		080A1	12/19	·	<del></del>	2/05	/2021	
1130   1	2/19/2019			ite (or greater						
RESULT TABLE				vas observed the time of te					HE ST	20
Test	g/210L	Time	10	the time of te		ation.		10%	*::::::::::::::::::::::::::::::::::::::	16
Air Blank	0.00	11:54	I administ	ered said E	Breath-Alo	cohol Tes	t in	<b>**</b>		- 0
Subject Test	0.00	11:55	complian	ce with the	applicab	le operati	ng	0	N. P	
Breath Volume Air Blank	1.785 LITER 0.00	S 11:56	-	edure of th		-		집 ***		(* * * /E
Wait		11:57	1					13/1/		
Air Blank Subject Test	0.00 0.00	11:58 11:58							***	
Breath Volume			SIGNATURE OF	FOPERATOR	- 17 - VALUE		_		1907	
Air Blank Cal Check	0.00	11:59	NAME					7	` . D	1.
Air Blank	0.08 0.00	11:59 11:59	SMITH, JO	SHUA					est Resu AC g/21	
			0000000	1435	PERMIT # 0000	16837		_		_
			AGENCY		10000			(	0.0	0
FFECTIVE THIRTY (30) DA	VE FROM DATE CERV	JED Nation of Down	BOARD O							Section 3
lays or more, if you refused or operating a CMV or CDL hol obafety must receive your writt The approved hearing requibition, Department of Publictine of not more than Five Fiverson's license, permit, or ot SERVING OF NOTICE:	or failed the state's test( der) OR a test result of . ten request for an admir est form is available a c Safety, P.O. Box 1141 tundred Dollars (\$500.0 ther evidence of driving	s). In addition, your cor 04 or more while opera isstrative hearing on the thtps://www.ok.gov/c 5, OKC, OK 73136. It s 0), or by both such fine privilege is in the custoo delivered a copy of	nmercial driving priviting a commercial me to Department appro- ips/documents/Re- thall be a misdemea and imprisonment, for a law enforcement the above contal	ilege in this state cotor vehicle. To a boved form, within qHearing.pdf. Su nor punishable by or any person to a cent officer or the ining the Notice	will be disqualifi appeal the drive fifteen (15) day ubmit your hearin imprisonment frapply for a renew Department.	ed if you refuse "s license revo s from the date ng request form or not less than wal or a replace on to the per	d or failed the s cation/disqualific you received no in person at 36 s seven (7) days ment license to	tate's test(s cation, the otice of revision N. MLK nor more operate a	s) Department ocation or di Ave. or by than six (6) i motor vehicl	of Public squalification. mail to Legal months, or by e while the
Date served: 12/1								dge #:		
accordance with Title			nalty of perjury	under the law	s of Oklahom	a that the fo	regoing is tru	e and co	rrect."	Section 4
<sub>oate:</sub> 12/19/20:	19 Place (location	n when signed):			_ Signature	of arresting	officer:			
SMITH, JOSI	HUA			AGENCY BOARD	OF TE	STS				
0000000435	AGENCY ADDRESS INTER-A	ZENCV		12011111	<u> </u>	ZIP CODE	PHONE 4 O F 4	2524	<i>-</i>	
THER WITNESSES:	TMIDK-MC	TIACT				00000	4054	2524	6 U	Santi. 5
NAME			TITLE	ADDRESS			PHONE			Section 5
1										
2 NAME			TITLE	ADDRESS			PHONE			
							1			

### 9/13

# OFFICER'S AFFIDAVIT AND NOTICE OF

	REV	OCA	ΓΙΟΝ/DI	SQUA	LIF	IC	ATI(	ON				Secti	ion I
ARREST DATE	ARREST			COUNTY	#	CIT			ATION#				
12/19/2019 ARREST LOCATION	110	0		55	CITY	3			922	COUNTY	,		
MOKC SUBJECT NAME				····	MO	CK	BIRTH		SEX	MOI		WEIGHT	
NORTH, GAYL	ON LEVERNE				(	08/	09/19		M	W	510	165	
ADDRESS 3600 MARTIN	LUTHER KIN	G A	OKLA	HOMA (	:ITY				OK		ZIP CODE 731		
DRIVER LICENSE # T083454871				EXPIRATION D	ATE	.9	STATE OK	CLASS		RESTRIC	1	NDORSEME W	:NTS
VEHICLE MAKE N		MODEL N	31			TAG N			STA	K K	CMV F	PLACARD <b>N</b>	
	arking lot, or other public place, on toxicating substances as prohibinstances): TEST. ROUTINE	r upon a private ted by law.	e road, street, alley or lar	ne which provides	access to	one or	more single or	r multi-far	ontrol of a nily dwellin	motor vel	hicle upon a nis state wh	a public road, ile under the	
Describe person's condition (odor NONE			WAS INFORMED OF TH				·			·			
BREATH-ALCOHOL ANALYSIS EQUIPMENT	RECORD, REPORT OF THE PE			, and LOG OF TE	ST AND M	AINTE	NANCE RECO	ORD.				Section	on 2
I-8000		1	-006145	BOARD	OF 1								
STANDARD		······	TARGET VALUE		PERMIT N		R						
Dry			0.080 LOT#				R INSTALLED		IDATE	CYLINDE	R EXPIRES	<u> </u>	_
ILMO OBSERVATION START   TEST			287190	80A1	12/	19	/2019				/202		
OBSERVATION START TEST 1130 12 RESULT TABLE Test	/19/2019 (C	Time		e (or greater is observed ne time of te	prior to	and	continuing			(\$\display \text{?}	THE ST	ATE	
Air Blank Subject Test Breath Volume Air Blank Wait Air Blank	0.00 0.00 1.785 LITERS 0.00	11:54 11:55 11:56 11:57 11:58	I administer compliance procee		applic	cabl	e operat		i i				WI.AU
Subject Test Breath Volume	0.00 1.851 LITERS	11:58	SIGNATURE OF C	OPERATOR							1907		
Air Blank	0.00	11:59	NAME			,			_				
Cal Check Air Blank	0.08	11:59 11:59	SMITH, JOS BADGE # 00000004		PERMIT # 0 0 0		16837			Br	Fest Res FAC g/2	210L	
EFFECTIVE THIRTY (30) DAY: days or more, if you refused or coperating a CMV or CDL holde Safety must receive your writter The approved hearing reques Division, Department of Public 5 a fine of not more than Five Hurperson's license, permit, or othe SERVING OF NOTICE: 1	railed the state's test(s). In add r) OR a test result of .04 or mo a request for an administrative t form is available at https:// bafety, P.O. Box 11415, OKC, idred Dollars (\$500.00), or by r evidence of driving privilege	dition, your cor re while opera hearing on the www.ok.gov/o DK 73136. It so both such fine s in the custod	mmercial driving privile titing a commercial mot e Department approv dps/documents/ReqH shall be a misdemeand and imprisonment, for dy of a law enforcemer	r driver's license ge in this state v cor vehicle. To a ed form, within learing.pdf. Su or punishable by any person to a nt officer or the I	will be disquesting the confifteen (15) bmit your fried imprisonment of the configuration of	ualifie driver' ) days nearing nent fo renew t.	d if you refuse s license revo from the date g request forn or not less tha al or a replace	ed or fail ocation/d e you rec m in pers n seven ement lic	ed the sta isqualifica eived noti on at 360 (7) days n ense to o	ate's test(station, the ice of revious N. MLK nor more operate a	s) Departmer ocation or ( Ave. or by than six (6 motor vehi	disqualification  y mail to Lega  ) months, or  scle while the	ion. jal bv
Date served: 12/19				mg the rection						ge #:	1 I above	J.	
n accordance with Title 12									g is true	and co	rrect."	Sectio	on 4
Date: 12/19/201							of arresting	•	_				
NAME SMITH, JOSH				AGENCY BOARD	OF		STS						
0000000435	AGENCY ADDRESS  INTER-AGENC	!Y					ZIP CODE 0 0 0 0	) 4	0542	2524	60		

No Temporary License Issued: Test Below Legal Limit

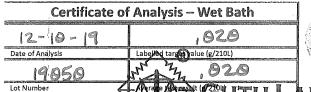

Time

14:53

14:53

14:54

14:55

14:55

14:56

14:56

14:59

15:00

15:00

15:01

15:01

15:02

15:02

15:03

15:04

15:04

dratories, inc.

590 NORTH 67th STREET 🌼 HARRISBURG, PA 17111-4511 🕫 TELEPHONE: 717-564-5470

BOT Technician Name and Signature

Test

Air Blank

Cal Check

Air Blank

Average

Std Dev

Cal Check Stats

Rel Std Dev(な)

In accordance with BRT - 2.2.0, Maintenance, the above referenced simulator solution is suitable for use as an external reference in maintenance of the Intoxilyzer 8000.

### CERTIFICATE OF ANALYSIS

ALPHA INSTRUMENT 2 intoxilyzer - Alcohol Analyzer Model 8000 SN 80-004923 12/10/2019 14:52

g/210L

0.009

0.019

0.000

0.020

0.000

0.019

8.080

0.020

0.080

0.019

0.000

0.020

0.008

0.019

0.000

0.020

0.000

0.020

0,000

0.020

0.000

0.0196

0.0005

2,6345

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number 19050 Alcohol Reference Solution for Simulator were analyzed by chromatography on February 5, 2019, using a Perkin Elmer Gas gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain

14:57 14:58 14:58 0.0236% (w/vol) ethyl alcohol. The expiration date for this lot

number is February 4, 2021 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.020 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

. Iperator's Signature

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN08031603 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

Certificate of Analysis – Wet Bath

12 16 19
Date of Analysis
Labelet tar (R) Jalue (g/210L)

19 08 0 7 7 9 9 9

590 NORTH 67th STREET O HARRISBURG, PA 17111-4511 O TELEPHONE: 717-564-5470

SM SM TL BOT Technician Name and Signature

Lot Number

....

In accordance with BRT – 2.2.0, *Maintenance*, the above referenced simulator solution is suitable for use as an external reference in maintenance of the Intoxilyzer 8000.

#### CERTIFICATE OF ANALYSIS

RLPHA INSTRUMENT 2 Intoxilyzer - Alcohol Analyzer - Model 8000 SN 80-004923 12/10/2019 15:16

Certified Alcohol Reference Solution for Simulator

Test g/210L Time Air Blank 0.000 15:17 Cal Check 0.040 15:17 Air Blank 0.000 15:18 Cal Check 0.040 15:19 Air Blank 0.000 15:19 Cal Check 0.040 15:20 Air Blank 0.000 15:20 Cal Check 0.040 15:21 Air Blank 0.000 15:22 Cal Check 0.040 15:22 Air Blank 0.000 15:23 Cal Check 0.040 15:24 Air Blank 0,000 15:24 Cal Check 0.040 15:25 Air Blank 0.000 15:25 Cal Check 0.039 15:26 Air Blank 0.000 15:27 Cal Check 0.039 15:27 Air Blank 0.000 15:28 Cal Check 0.039 15:29 Air Blank 0.000 15:29 Cal Check Stats Average 0.0397 Std Dev 0.0004 Rel Std Dev(%) 1,2167

Random Samples of Lot Number 19080 of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on March 5, 2019, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.0481% (w/vol) ethyl alcohol. The expiration date for this lot number is March 4, 2021 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.040 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

16837 Decretor's Signature

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN12181501 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights.

Calibration verification is done prior to each use utilizing NIST traceable weights.

Certificate of Analysis – Wet Bath 12-10-19 Date of Analysis Labelled target value (g/210L) .100 19301

STREET • HARRISBURG, PA 17111-4511 • TELEPHONE: 717-564-5470

In accordance with BRT - 2.2.0, Maintenance, the above referenced simulator solution is suitable for use as an external reference in maintenance of the Intoxilyzer 8000.

#### CERTIFICATE OF ANALYSIS

RLPHR INSTRUMENT 2

Lot Number JOSH

intoxilyzer - Alcohol Analyzer

BOT Technician Name and Signature

SN 80-004923 15:36

Model 8000 12/10/2019

Test g/210L Time Air Blank 0.000 15:37 Cal Check 0.100 15:37 Air Blank 0.000 15:38 Cal Check 0.101 15:39 Air Blank 0.000 15:39 Cal Check 0.100 15:40 Air Blank 0.000 15:40 Cal Check 0.100 15:41 Air Blank 0.000 15:42 cal Check 0.100 15:42 Rir Blank 15:43 0.000 Cal Check 0.099 15:44 Air Blank 0,000 15:44 Cal Check 0.100 15:45 Air Blank 0.000 15:45 Cal Check 0.099 15:45 Air Blank 0.000 15:47 Cal Check 0.100 15:47 Air Blank 0.000 15:48 Cal Check 0,100 15:49 Air Blank 0.000 15:49 Cal Check State Average 0.0999 Std Dev 0.0005

Certified Alcohol Reference Solution for Simulator

Random Samples of Lot Number 19301 Alcohol Reference Solution for Simulator were analyzed by chromatography on November 1, 2019, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.1210% (w/vol) ethyl alcohol. The expiration date for this lot number is October 30, 2021 lat 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.100 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

Operator's Signature

Rel Std Dev(%) 0,5682

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN04271602 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.

Certificate of Analysis – Wet Bath									
12-11-19	,200	-							
Date of Analysis	Labelled tar value (g/210L)								
19200	1290	Yel]							
Lot Number	Alerant Alerandit (/210)	AB							

BORATORIES, INC.

590 NORTH 67th STREET 9 HARRISBURG, PA 17111-4511 9 TELEPHONE: 717-564-5470

BRT Form 6.0

In accordance with BRT – 2.2.0, *Maintenance*, the above referenced simulator solution is suitable for use as an external reference in maintenance of the Intoxilyzer 8000.

### CERTIFICATE OF ANALYSIS

RLPHA INSTRUMENT 2 Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-004923 12/11/2019 08:03

BOT Technician Name and Signature

Certified Alcohol Reference Solution for Simulator

- Time g/210L Test ( 0,000 08:04 Air Blank Cal Check 0.198 N8: N4 Air Blank 0.000 18-85 08:06 Cal Check 0.198 0.000 08:06 Air Blank 08:07 0 197 Cal Check Air Blank 0.000 N8: 08 Cal Check 0,197 08:08 0,000 08:09 Air Blank Cal Check 0.197 08:10 Air Blank 0.000 08:11 Cal Check 0.197 Air Blank 0.000 N8:11 Cal Check 0.197 08:12 0.000 08:13 Air Blank 08:13 0.197 Cal Check 08:14 Air Blank 0.000 Cal Check 0.196 08:15 0.000 08: 15 Air Blank 0.198 Cal Check 0.000 Air Blank Cal Check Stats 0.1972 Average Std Deu 0.0006

Rel Std Deu(%) 0.3207

Random Samples of Lot Number 19200 of Alcohol Reference Solution for Simulator were analyzed by gas chromatography on August 7, 2019, using a Perkin Elmer Gas Chromatograph Autosystem XL S/N: 610N9030209, and found to contain 0.2418% (w/vol) ethyl alcohol. The expiration date for this lot number is August 6, 2021 at 11:59 PM.

When used in a calibrated Simulator, operating at 34°C +/- .2°C, this solution will give a breath alcohol analysis instrument reading of 0.200 g/210L +/- 3%.

The alcohol and water used in this solution were free of test interfering substances.

Ted L. Pauley, President GUTH LABORATORIES, INC.

NIST Traceability:

Testing was conducted using Cerilliant Reference Standard lot number FN08101505 whose values are traceable to NIST.

All balances are calibrated annually by an outside agency using NIST traceable weights. Calibration verification is done prior to each use utilizing NIST traceable weights.